



FUTURETRONICS
Playing Harder Since 1979

INSTRUCTIONS

FUT-7166 Dual Power Dock

To suit: Nintendo™ Wii™

Step:

- 1) Open & remove the battery cover on your Wii™ remote (*see figure.1*).
- 2) Remove existing batteries (*see figure.1*).
- 3) Replace with rechargeable battery included in this kit (*see figure.2*).
- 4) Unplug the AC power from the back of the Wii™ console.
- 5) Attach the grey power cord to the Power Dock.
- 6) Attach the the grey power plug to the back of the Wii™ console, where the AC power plug was previously plugged in (*see figure.3*).
- 7) Attach the AC power plug into the back of the grey power plug off the charging dock (*see figure.3*).
- 8) Place the Wii™ remotes on the the Dual Power Dock and push down firmly (*see figure.4*).
- 9) The red LED will light up indicating that it is currently charging.
- 10) When the red LED changes to green, this indicates that the Wii™ remote is fully charged.



fig.1



fig.2

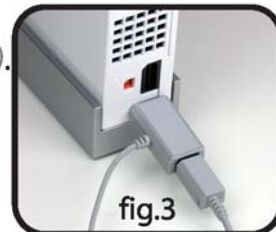


fig.3



fig.4

Notes:

- Wii™ remotes will charge whilst the console is switched off.
- Wii™ remote does not need to be fully charged in order to be used.
- Charging time will vary depending upon charge remaining in battery.
- We recommend charging the batteries continuously for 12hrs prior to first use.

www.futuretronics.com.au

Futuretronics will not be held responsible for any misuse of this product.