

Ultimate Racing Wheel

To suit: PS3®/PS2®

Features

- Ergonomic design to fit well into your hands and lap.
- Four LEDs to indicator and show which player the steering wheel is assigned to
- MODE button works as the PS button
- Compatible with PS3® and PS2®
- 3 modes available for PS2: DIGITAL /ANALOG /NEGCON ;
- 8 relocatable buttons: L-wing, R-wing, accelerating, brake pedals,L3,R3,L2,R2 ;
- 270 degree steering angle
- Built in motors that support vibration features (game dependable).
- Spring loaded accelerator and brake pedals provide a more realistic racing experience.
- Attach the steering wheel to a table securely using the 6 suction cups, or simply place it on your lap
- Choose from 3 different steering sensitivity levels

Buttons layout

Front view

LED channel indicator

Left Paddle


Right Paddle



Button & Gear Stick layout



Foot Pedal Socket

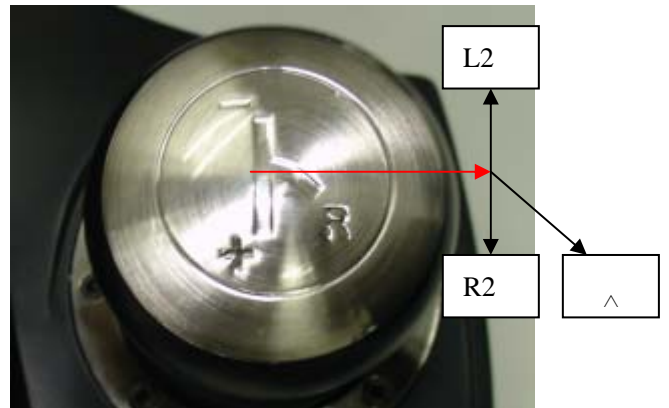

Function key table

| Type | PS2/Digital | PS2/Analog | PS2/Neg | PS3 |
|--------------|-------------|------------|---------|--------|
| Action Key | X | X | RY | X |
| | ○ | ○ | A | ○ |
| | □ | □ | LX | □ |
| | | | B | |
| | R1 | R1 | R1 | R1 |
| | L1 | L1 | LY | L1 |
| | R2 | R2 | R1 | R2 |
| | L2 | L2 | LY | L2 |
| | / | R3 | / | R3 |
| | / | L3 | / | L3 |
| D-PAD | UP | UP | UP | UP |
| | DOWN | DOWN | DOWN | DOWN |
| | LEFT | LEFT | LEFT | LEFT |
| | RIGHT | RIGHT | RIGHT | RIGHT |
| Function key | START | START | START | START |
| | SELECT | SELECT | / | SELECT |
| | ←/→ | LX | RX | LX |
| Left Paddle | L2 | L2 | ↑ | L2 |
| Right Paddle | R2 | R2 | ↓ | R2 |
| Left Pedal | □ | □ | LX | □ |
| Right Pedal | X | X | RY | X |
| Mode | MODE | MODE | MODE | PS |
| Gear Stick | L2 | L2 | ↑ | L2 |
| | R2 | R2 | ↓ | R2 |
| | | | B | |

For use with PS3®

Connection and installation

Note: Please ensure that your console is turned off before connecting or disconnecting the steering wheel.

- Whilst your PS3® is off connect the wheel to the PS3® and then switch on the PS3® console.
- All the channel LED indicators will flash repeatedly, press MODE button to connect (MODE button acts as the PS button).
- The LED number indicator on the racing wheel will represent the player number the racing wheel is assigned to:
 - LED 1~4 = Player 1~4
 - LED 1+4 = Player 5
 - LED 2+4 = Player 6
 - LED 3+4 = Player 7

Remarks:

- 1) When you unplug or plug the wheel into the PS3® console or when you reset the PS3® console, you need press the MODE button for re-connection.
- 2) The default mode is Analog mode

For use with PS2®

Connection and installation

- Connect wheel to the PS2® console via the assigned port (single player uses left port, player 2 uses right port) ;
- **Mode changing:**

Simply press the MODE button to select Digital (LED off) or Analog (red LED on), Negcon (red LED flash)
- **Relocation function (no memory)**
 - 1、 The original buttons: X,○,□, , L1,L2,R1,R2
 - 2、 Relocatable buttons: left paddle, right paddle, accelerating, brake, L3, R3, L2, R2

Relocation setting :(can not be program in NEGCON mode)

- A. Hold on SELECT+START for 3 seconds, LED will illuminate green;
- B. Press the button you wish to relocate, the green LED will flash;
- C. Press the original button, the green LED will switch off, the change is now complete.

Single button relocation reset:


- A. Press and hold on SELECT+START for 3 seconds, the LED will illuminate green
- B. Press the relocated button, the green LED will flash
- C. Re-press the button again, and the green LED will switch off, the resetting procedure is complete.

All button relocation reset:

- A. Press and hold on SELECT+START, LED will illuminate green;
- B. Press and hold on the START button for 4 seconds, green LED will switch off. All relocated buttons are reset to default status.

● Sensitivity adjustment:

- 1、 Three sections of sensitivity: High($\pm 40^\circ$), Mid($\pm 80^\circ$) ,Low($\pm 120^\circ$)
- 2、 Select corresponding section with moving the switch;

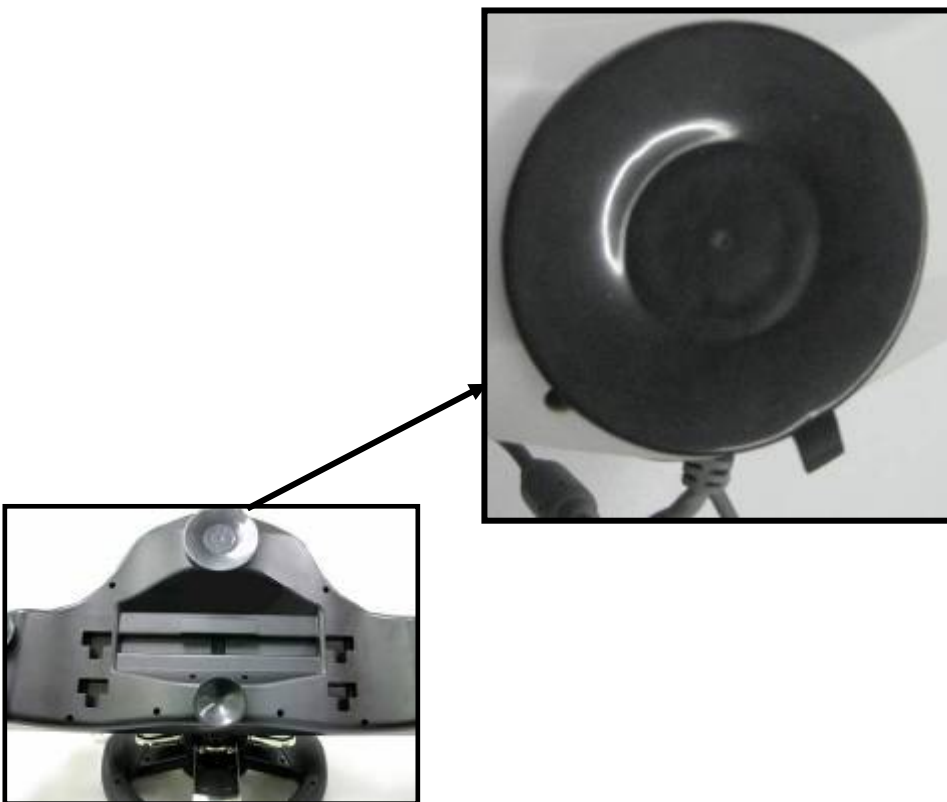

Pedals illustration

Default : Folder pedals



Special Instructions for use with PS3 F1 2010

Due to the default settings within the **PS3 F1 2010** software, some manual re-assigning of buttons will need to be performed to utilise your **FUTURETRONICS ULTIMATE RACING WHEEL** as designed

To re-assign buttons on your wheel, please follow the simple instructions below:

- 1/ Access the Options menu by pressing the 'Start' button on the wheel.
Then choose Options>Driving Controls>Edit Setup
- 2/ Using the directional pad to move up & down, highlight the function you wish to re-assign and press 'X' and 'waiting' will appear. Whilst 'waiting' is showing, perform the appropriate controller action (e.g.: press the accelerator) and it will appear in the place of the 'waiting'.
- 3/ Repeat the above steps for all actions you want to set up.
- 4/ When you finish re-assignng the various buttons, exit the set up area by pressing the 'O' button to return to the game.
- 5/ Your profile should be saved and you can now enjoy your Ultimate Racing Wheel to it's potential.